

SIDEPAK™ PERSONAL AEROSOL MONITOR MODEL AM520



The SidePak™ AM520 Personal Aerosol Monitor is a small, portable, battery-operated, data-logging, light-scattering laser photometer that provides real-time aerosol mass concentration readings of dusts, fumes, mists, smoke and fog within a worker breathing zone. Newly designed inlet conditioners increase the mass concentration capability and provide size fraction cut points for PM₁₀, Respirable (PM₄), PM₅ (China Respirable), PM_{2.5}, PM₁ and 0.8µm Diesel Particulate Matter (DPM). This monitor is the perfect solution for real-time, personal aerosol sampling in a variety of workplace environments, including but not limited to general industry, foundries, construction sites, chemical plants, refineries, petrochemical, power and utilities, transportation, aerospace, maritime, confined spaces and mining.

New Features


- + Robust impactors for higher mass concentration range
- + Audible and visual alarms
- + 0.8µm DPM impactor
- + PM₅ China respirable size fraction impactor
- + High capacity battery
- + Color OLED display

Features and Benefits

- + Real-time mass concentration measurement and data logging for "in-the-field" data analysis
- + Push button menu operation or programmable through newly improved TrakPro™ v5 Software
- + User selectable alarm levels to alert workers to high aerosol concentrations
- + Newly designed robust impactors enable reliable size fraction measurements at higher aerosol concentrations over longer run times

Dare to Compare!


User-settable audible and visual alarms as well as newly designed impactors, for more size fraction options, make this instrument a valuable tool for workplace exposure monitoring. The new impactors provide reliable size fraction at a much higher mass concentration, allowing a longer run time with improved accuracy.

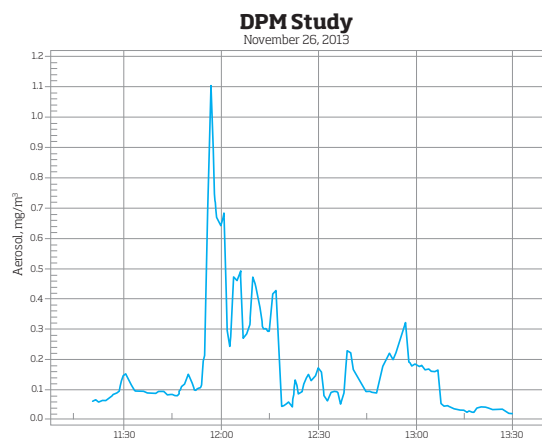

Time History – Graphically displayed, logged data can display high and low exposure concentrations that cannot be identified with traditional gravimetric sampling. This example of actual customer data illustrates the value of seeing what time peak exposure occurred. This enables an industrial hygienist to investigate the cause of the spike at 12:00 and recommend corrective actions specific to the cause of the exposure without delay.



UNDERSTANDING, ACCELERATED

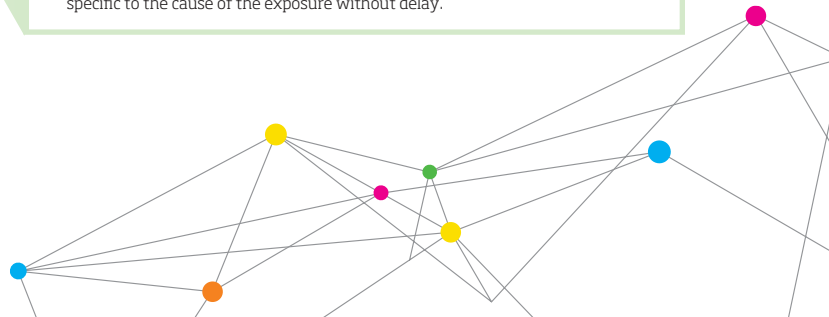

SPECIFICATIONS

SIDEPAK™ PERSONAL AEROSOL MONITOR MODEL AM520

Sensitivity

Sensor Type 90° light scattering, 650 nm laser diode
Calibration Calibrated against a gravimetric reference using the respirable fraction of standard ISO 12103-1, A1 Test Dust

Aerosol Concentration Range 0.001 to 100 mg/m³
Particle Size Range 0.1 to 10 µm
Minimum Resolution 0.001 mg/m³
Zero Stability ±0.001 mg/m³ over 24 hours using 10 second time constant

Temperature Coefficient Approximately +0.0005 mg/m³ per °C (for variations from temperature at which instrument was last zeroed)

Flow Rate

Range User-adjustable, 0 to 1.8 liters/min (L/min) Note: Upper range is dependent on impactor or cyclone attached to the SidePak AM520 Monitor

Temperature Range

Operating Range 32° F to 120° F (0° C to 50° C)
Storage Range -4° F to 140° F (-20° C to 60° C)
Operational Humidity 0 to 95% RH, non-condensing

Time Constant (OLED Display)

Range User-adjustable, from 1 to 60 seconds

Built-in Inlets

Standard inlet Not size-specific
PM_{1.0} impactor 50% cut-off at 1.0 µm
PM_{2.5} impactor 50% cut-off at 2.5 µm
PM_{5.0} impactor 50% cut-off at 5.0 µm
PM₁₀ impactor 50% cut-off at 10.0 µm

Attachable Cyclones

4 µm Dorr-Oliver 50% cut-off at 4.0 µm
0.8 µm DPM 50% cut-off at 0.8 µm

Alarms

Alarm Types General, STEL
Default Settings 0.5 mg/m³, 1 mg/m³, 3 mg/m³, 5 mg/m³, 15 mg/m³, Off
Programmable from 0.001 to 999 mg/m³ through TrakPro Software

Alarm Indicator 95 dBA (at one foot) audible horn, blinking red LED, flashing red OLED display
Ringback Delay 30 sec, 1 min, 3 min, 5 min, 10 min, Off

Data Logging

Data Points Approx. 80,000 (55 days logging once per minute)
Logging Interval User-adjustable, from 1 second to 60 minutes

User-Select Calibration Factors

Factory Setting 1.0 (non-adjustable)
Ambient Setting 0.38 (non-adjustable)
User-Defined Settings 5, with user-defined labels via TrakPro Software
Range 0.1 to 10.0, user-adjustable

Physical

External Dimensions 5.1 x 3.7 x 3.1 inch
129.5 mm x 94 mm x 78.4 mm with 803300 battery
Weight 22 oz (0.62 kg) with 803300 battery
Display 160 x 128 resolution color OLED display
Tripod Mounting Nut ¼-20 female thread

Battery

Rating 5400 mAh Li-Ion Pack
Run Time Greater than 20 hours at 1.7Lpm with a PM_{2.5} impactor
Charge Time 4.0 hours (typical with a fully depleted battery)

Power Supply (p/n 803302)

Input Voltage Range 100 to 240 VAC, 50 to 60 Hz
Output Voltage 12 VDC @ 3.0A

Maintenance

Factory Clean/Calibrate Recommended annually
User Zero Calibration Before each use
User Flow Calibration As needed with use of inlet conditioner

Communications Interface

Type USB 2.0
Connector, Instrument USB Micro-B (socket)

Minimum Computer Requirements for TrakPro Software

Communications Port Universal Serial Bus (USB) v2.0 or higher
Operating System Microsoft Windows® 7, 8, or 10 (32-bit or 64-bit) operating systems

Approvals

AM520 with TSI Battery Pack P/N 803300



Immunity EN61326-1:2013
Emissions EN61326-1:2013 Class B
Safety IEC 61010-1:2010
IEC 60825-1:2014

SAVE TIME AND MONEY

Real-time aerosol monitoring instruments like the SidePak AM520 Personal Aerosol Monitor can be used to measure and evaluate workplace exposures without delay, facilitating immediate feedback and corrective action. This means no more waiting for sampling data to be returned from the analytical lab.



UNDERSTANDING, ACCELERATED

TSI Incorporated - Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
UK Tel: +44 149 4 459200
France Tel: +33 1 41 19 21 99
Germany Tel: +49 241 523030
India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388

Specifications are subject to change without notice.

TSI and the TSI logo are registered trademarks, and SidePak and TrakPro are trademarks of TSI Incorporated.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.